


Remote Toggle Control For AirPux Brakes

www.AFX.bz sales@AFX.bz 519 801 6555

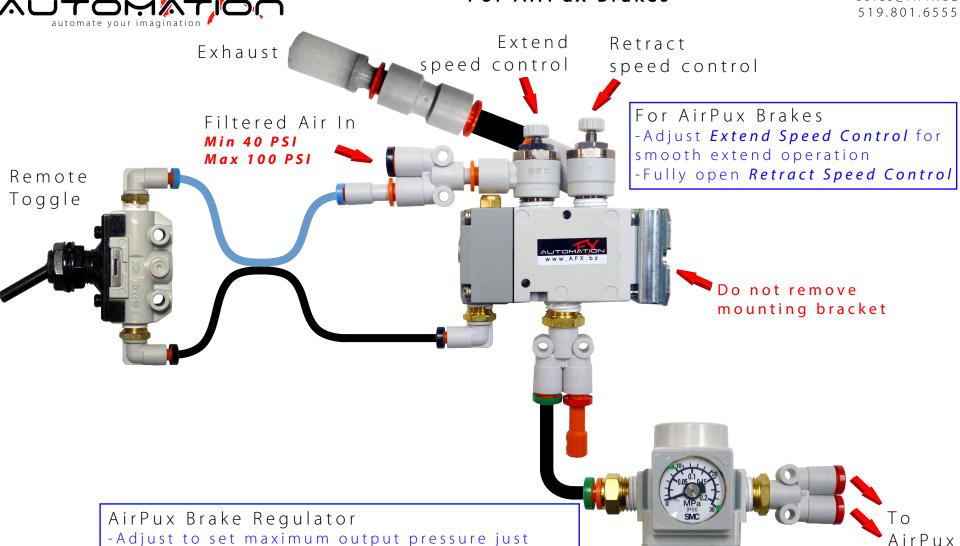

- -Adjust to set maximum output pressure just prior to lifting the unit.
- -AirPux Brakes are not meant to lift, only apply friction force to the floor.
- -Increase pressure until unit just starts to lift, then decrease pressure by 5 PSI until unit lowers. (ex. lifts at 25 PSI, set at 20 PSI)